 
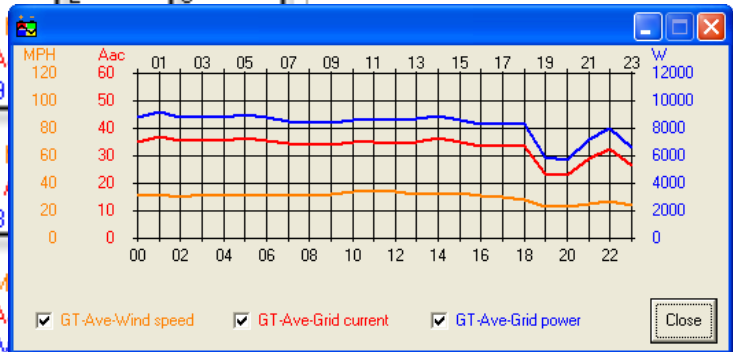 
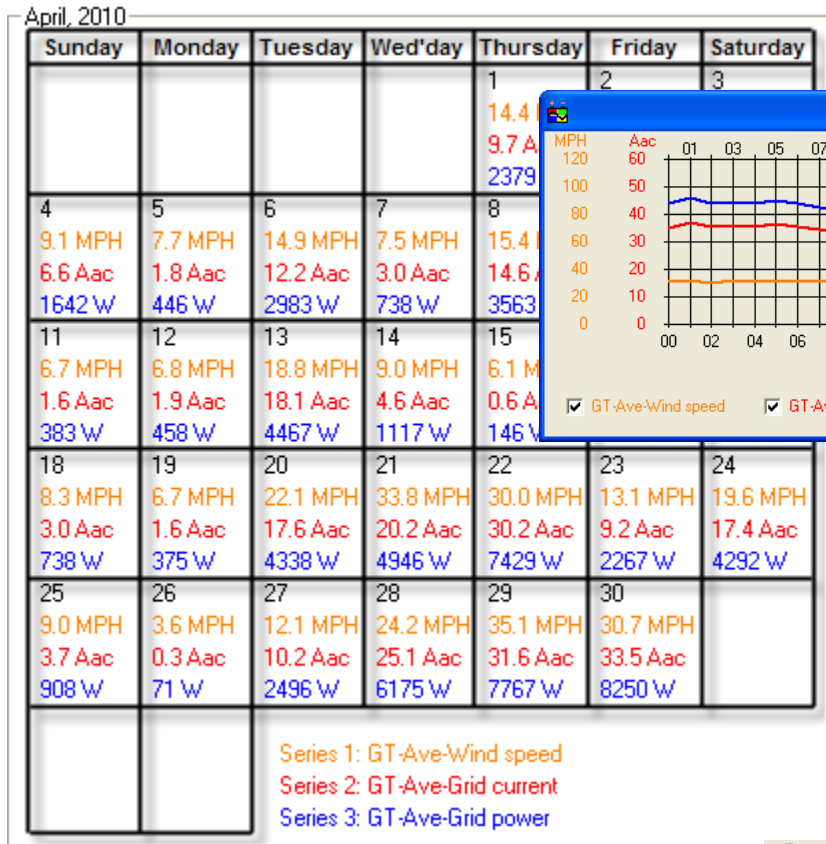 


WinVerter™ Data Reader is Windows®-based PC software that reads the data log files generated by RHE's WinVerter-Monitor series of Renewable Energy monitoring software.

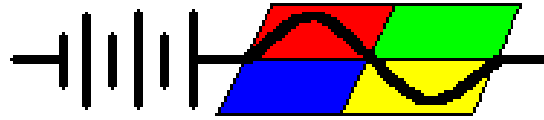

Text or Graphs

WinVerter Data Reader displays the data in either textual calendar format, or graphical chart format.

Multiple Series

The user may choose up to three parameters to display simultaneously.

Compatible With All WinVerter-Monitor Programs

WinVerter Data Reader reads data log files for all WinVerter-Monitor (WVM) programs, including:

- WVM-OB for the OutBack Power equipment
- WVM-GT and PS for the Bergey Excel-S GridTek-10 & PowersyncII inverters
- WVM-SW for the Xantrex SW-Series inverter
- WinLink for the Xantrex Link-10 battery monitor

The future Professional version of WinVerter Data Reader will also read the Professional data logs created by the Pro versions of WinVerter-Monitor.

Data Selection

Series 1
GT-Ave-Wind speed

Series 2
GT-Ave-Grid current

Series 3
GT-Ave-Grid power

Features

- Reads standard data log files from all WinVerter-Monitor programs.
- Selectable display series – up to 3 at a time, with configurable colors
- Selectable Year, Month or Day views.
- Textual Calendar display.
- Graphical Chart display.
- Simulation & Demo mode.

Try It Before You Buy It

You may download a free evaluation version (coming soon) from our web site, try it out, and if you like it, purchase on-line. We then email you the unlock codes which turns the evaluation software into fully functional software. Evaluation mode allows single-series, textual-only display of a subset of data parameters.

Simulation Mode


The program allows you to simulate operation using canned demo data files just as if it were reading your actual data files. This allows for even more detailed evaluation and greatly assists in demonstrations.

Super Simple Installation

WinVerter Data Reader automatically detects which models of *WinVerter-Monitor* are installed your PC, and automatically locates the folders containing your log files.

Super Simple Operation

A simple tree-view allows you to easily select the Year, Month or Day of the data you want to view.

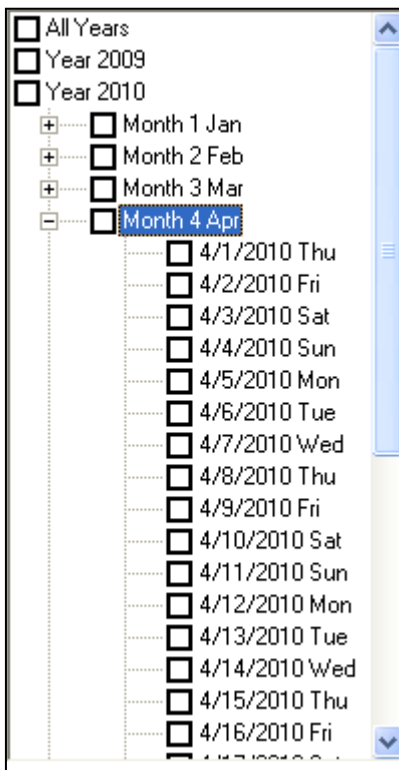

PC Requirements:

- Intel Pentium (or equivalent) or better processor
- Processor Speed: 633 MHz or better.
- Microsoft Windows® 2000 or later operating system
- 512 MB RAM or as required by the operating system, whichever is higher
- 10 MB of free hard disk space plus additional space for storage of textual and graphical images.
- Multi-read CDROM drive recommended
- Video Display (to view all info simultaneously): 1024 x 768 or larger. Color recommended.
- Pointing device, such as mouse or track-ball
- For continuous, unattended operation the following is recommended:
 - No additional software should be installed other than Internet Explorer, Microsoft Office products, and the latest version of pcAnywhere or VNC.
 - Meet the minimum requirement for the other software installed on the PC.
 - Latest drivers compatible with the OS for the installed hardware.
 - The particular model of PC should be listed on the Microsoft Hardware Compatibility List (HCL) for the installed OS.

Windows® is a registered trademark of Microsoft Corporation